aquatone

PADDLE IN STYLE | AQUATONE.COM

EN



INFLATABLE
PADDLE BOARD
USER GUIDE

WELCOME

Ready to ride your own wave?

Thanks for choosing aquatone! Your next water adventure starts here. Before you hit the water, take a moment to read this manual to get the best out of your board and enjoy every session safely.


Grab your paddle, feel the flow, and let the good times roll!

INDEX

P.2 Info and Serial Number
P.3 Inflatable SUP Parts
P.4 Safety Precautions
P.5 Before Inflation - Check the Valve
P.6 How to Use the Hand Pump?
P.6 Board Set-up
P.7 Fin Installation
P.7 Safety Leash Set-up
P.8 Paddle Installation
P.9 Board Deflation
P.10 Maintenance and Storage
P.10 How to Fold the SUP
P.11 Repair Tips

SERIAL NUMBER

Find your board's Serial Number (SN) on the back of the board, just in front of the fin slot.

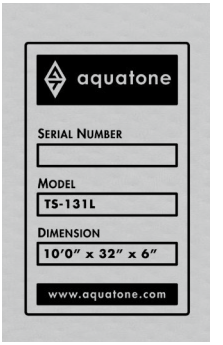

IMPORTANT INFORMATION

Model:	
Date of Purchase:	
Dealer Name:	
Province/State:	
Country:	
Item No:	
Serial Number:	

Follow us at aquatone

www.aquatone.com

All data subject to change @aquatone
aquatone is a registered trademark of Aztron Sports.

INFLATABLE SUP PARTS



A	D-ring connectors	**B**	Cargo bungee cords
C	Air valve	**D**	Heavy duty center handle
E	Soft EVA deck pad	**F**	*Optional kayak seat attachment D-rings
G	Tail kick pad	**H**	Safety leash D-ring attachment
I	Removable center fin	**J**	ALLSTYLE 3.0 aluminum 3-section paddle
K	Gear backpack	**L**	Double-action pump
M	9’ coiled safety leash	**N**	9" push-in fin
O	Repair kit		

SAFETY PRECAUTIONS

Paddle sports can be dangerous and physically demanding, with a risk of serious injury or death, including drowning. By using this product, you acknowledge and assume the risks associated with paddle sports. Always follow safety guidelines and safe operating practices when using your aquatone board.

You are responsible for assessing your skills and determining whether weather, wind, and water conditions are suitable for your ability. Use your best judgment when deciding where and when to paddle. You assume responsibility for risks of injury, death, or damage arising from the use or handling of this product.

⚠ WARNING

A **WARNING** indicates a hazardous situation which, if not avoided, could result in death or serious injury.

- **Check** weather conditions and water levels before heading out.
- **Always** wear an approved personal floatation device (PFD) before you start paddling, read the manufacturer's documentation about your PFD and familiarize yourself with how to properly wear it. (Always wear safety leash).
- **Do not** go into water if you are under the influence of alcohol, drugs, or medication as it may affect your condition, judgement or ability to safely and securely operate your SUP.
- **Be aware** of your limitation and do not exceed you paddling ability.
- **Dress** accordingly for weather conditions and, if necessary, wear a wetsuit.
- **Always** familiarize yourself with the body of water you intend to navigate and refrain from hazardous environments.
- **NEVER** let minors use this SUP without adult supervision.
- **NEVER** tow this SUP behind a boat.
- **NEVER** use this SUP as a personal flotation device
- **NEVER** exceed SUP's maximum weight.

⚠ CAUTION

A **CAUTION** indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.


- **Check** your equipment prior to each use of signs of wear or failure.
- **Always** carry identification.
- **Paddle** alongside someone. It is preferable to be accompanied in case of an emergency or accident.
- **Always** inform someone about your plan to go paddling, including your destination, duration, amount of people who will be with you. Be informed on those who paddle with you with their physical ability as well as their medical conditions.
- **Follow** Coast Guard regulations, boating, and safety laws, and regulations and orders of various levels of government (including regional laws).

BEFORE INFLATION : CHECK THE AIR VALVE

The air valve may loosen during shipping. Before inflating your board, make sure the valve is securely tightened. Check it regularly to prevent air leaks and maintain optimal performance.

If air leaks around the valve:

This may indicate that the valve is not tightly sealed against the board's PVC fabric. Use the valve wrench included with your accessories to tighten the valve securely. Do not overtighten.

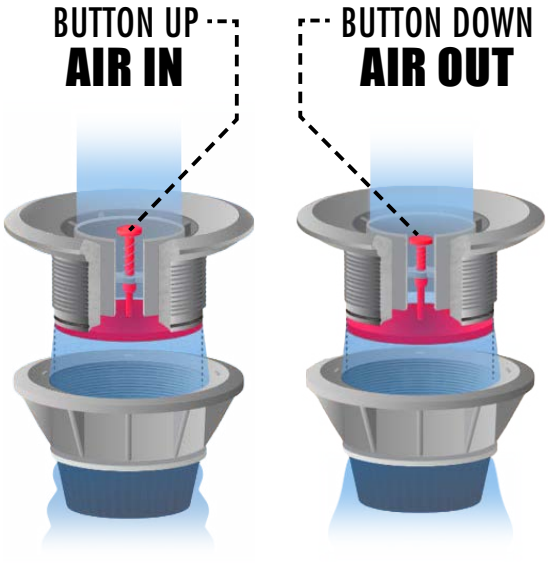

NOTE: The air valve can only be tightened when the board is fully deflated.

HOW TO TIGHTEN YOUR AIR VALVE



STEP 1 | Remove the Valve Cap

Remove the valve cap and insert the **valve wrench** provided in the repair kit. Make sure the wrench fits securely into the valve.



STEP 2 | Tighten the Valve

Use your free hand to hold the valve firmly in place. Turn the wrench **clockwise** until the valve is securely tightened.



STEP 3 | Replace the Valve Cap

Reinstall the valve cap and make sure it is **securely tightened** before use.

HOW TO USE THE AQUATONE PUMP



1. Connect the Hose

Connect the hose to the **INFLATE** port on the pump body.



2. Choose Your Pumping Mode

Keep the air screw closed for double-action pumping. When pumping becomes harder, remove the screw to switch to single-action mode.



3. Check the Pressure Gauge

The pressure gauge is on top of the pump. Do not exceed **15 PSI** (green zone) or enter the red zone, as overinflation may void your warranty.

BOARD SETUP



1. Unpack the Board

Unpack your board from the aquatone gear bag and lay it on a flat surface free of sharp objects.



2. Check the Air Valve

Remove the valve cap and make sure the valve pin is in the upper (closed) position before inflation. If the pin is down, press it lightly and turn it until it returns to the upper position.



3. Connect the Pump and Hose

Attach the pressure gauge to the pump. Push the hose connector firmly onto the pump, then connect the other end to the board's air valve. Make sure all connections are secure before inflating.

FIN INSTALLATION



1. Insert the Fin

Flip your board over and slide the fin all the way to the right. Insert the fin with its tip pointing toward the tail of the board.



2. Check the Fin


Pull gently on the fin to make sure it is properly positioned.



3. Lock the Fin

Flip your board over and slide the fin all the way to the right. Insert the fin with its tip pointing toward the tail of the board.

SAFETY LEASH SET-UP

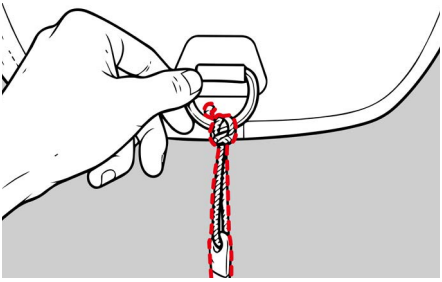

Attach the Leash

Secure the leash loop to the safety leash D-ring at the tail of your board. Pull tight to secure.



Secure the Ankle Cuff

Fasten the cuff comfortably around your ankle.

Check Before Paddling

Make sure both ends are securely attached before heading out on the water.

PADDLE INSTALLATION



Connect the three sections of the ALLSTYLE 3.0 aluminum paddle.



Align the pins and slide each section into place until secured.



Adjust the paddle to a comfortable length. Align the clamp and close it securely before use.

ADJUST THE PADDLE LENGTH

Stand upright with the paddle beside you. Adjust the paddle so the handle reaches approximately **15–20 cm above the top of your head.**

Open the adjustment clamp, slide the shaft to the desired length, then securely close the clamp before use.

Tip:
Keep the paddle slightly longer for relaxed touring and slightly shorter for more powerful or faster paddling.



PERFECT PADDLE LENGTH

*OPTIONAL KAYAK SEAT INSTALLATION

If you purchased this optional accessory, follow the steps below to install your kayak seat.



1. Attach the Straps

Connect the kayak seat straps to the kayak seat attachment D-rings on both sides of the board.



2. Secure and Adjust the Seat

Clip the metal snap hooks to the D-rings. Position the seat near the center of the board and adjust the straps for a comfortable, upright position. Make sure all connections are secure before use.

BOARD DEFLATION



1. Clear the Valve

Remove any water or debris from around the air valve before deflation.



2. Release the Air

Press the valve pin down slowly to release the air. Once the airflow slows, press the pin all the way down and turn it clockwise to lock it in the **OPEN** position.




3. Remove the Remaining Air

Connect the hose to the **DEFLATE** port on the pump body and pump out the remaining air.

MAINTENANCE AND STORAGE


- **Rinse After Use:** Rinse off sand and saltwater with fresh water or mild soap. Do not use harsh chemicals.
- **Dry Thoroughly:** Wipe your board dry or let it dry completely before storing it in the aquatone gear bag.
- Check your board for abrasions or damage before and after each use.
- **Handle with Care:** Do not drag your board across the ground, as this may cause abrasion, punctures, or air leaks.
- When deflating and packing your board, use a clean surface free from stones and sharp objects.
- **Store Properly:** Keep your board in a cool, clean, and dry place.
- Avoid Extreme Temperatures: Do not store your board above 50°C (122°F) or below 0°C (32°F).
- **Store Deflated:** Always store your board deflated to reduce stress caused by temperature and air pressure changes.

HOW TO FOLD YOUR SUP

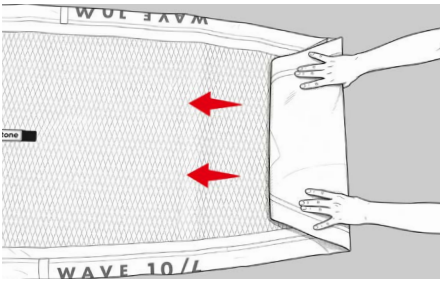


1. Start Folding

Remove the fin before folding. Start rolling the board tightly from the tail toward the valve to release the remaining air.

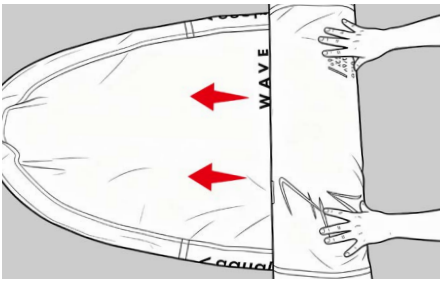

2. Roll It Up

Continue rolling tightly, pushing out any trapped air until the board is fully folded.

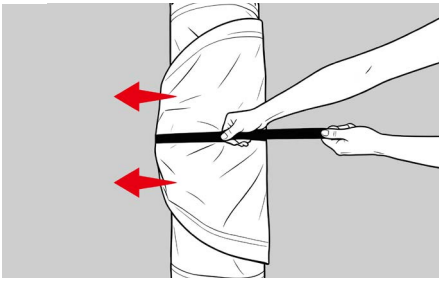

3. Secure and Store

Use the compression strap to secure the folded board. Place it in the aquatone gear bag and store it in a cool, dry place.

HOW TO REPAIR THE SUP FIXING A HOLE



Find the **Repair Kit** supplied in the package.

NOTE: Scissors, sandpaper and repair glue are NOT included.



Cut out a piece of the repair matter included in your Repair Kit to cover the hole. Make sure the patch you cut out is big enough to cover the hole completely. The patch should be about 2cm bigger than the hole on all sides.



Roughen the area around the hole. Make sure to sand a larger area, around the hole, sand thoroughly in order to roughen the material – this makes the patch stick much better. After that also roughen the patch itself on the side that will be glued on the board.



Apply the glue on the roughened side of the patch and on the area to be repaired.

ATTENTION: Do not use too much glue! It should only be a thin layer. Let the glue dry for at least 5 minutes – it should still be soft but not sticky when you put your finger on it.



Put the patch on the hole and press it with your fingers on the board as hard as you can. Rub it with your thumb in order to make it stick to the board properly on all sides. You can also use a piece of hard plastic or something similar to put even more pressure on the glued-on patch.



Leave it to dry for at least **12 hours** before next paddle.

HOW TO REPAIR THE SUP FIXING THE EVA



Find the Repair Kit supplied in the package.

NOTE: Scissors, sandpaper and repair glue are NOT included.



Roughen the area you want to glue. Apply glue to the roughened area on the board as well as on the bottom side of the part of the footpad that has came off.

ATTENTION: Do not use too much glue! It should only be a thin layer. Let the glue dry for at least **5 minutes** – it should still be soft but not sticky when you put your finger on it.



Press the part of the footpad you want to repair to the board as hard as you can. Rub it with your thumb in order to make it stick to the board properly on all sides.

You can also use a piece of hard plastic or something similar to put even more pressure on the glued-on patch.



Leave it to dry for at **least 12 hours** before next paddle.

WARRANTY

1 YEAR

aquatone warrants this product to be free from major defects in material or workmanship to the original purchaser for a period of ONE (1) YEAR from the date of purchase. This warranty is subject to the following limitations.

1. The warranty is valid only when the warranty card is completed and returned within 30 days of date of purchase.
2. The warranty is valid only when this product is used for normal recreational paddling activities and does not cover products used in rental or school operations.
3. Aquatone will make the final warranty determination, which will require inspection and/or photo of the boat, which clearly show the defect(s). Please return the complete Aquatone kayak package with prepaid postage to the retailer you purchased from and follow their return instructions.
4. If a product is deemed to be defective by aquatone, the warranty covers the repair or replacement of the defective product only. Aquatone will not be responsible for any costs, losses, or damage incurred as a result of loss or misuse of the product.
5. This warranty does not cover damage caused by misuse, abuse, neglect; normal wear and tear including, but not limited to, punctures, damage due to excessive heat exposure, damage caused by improper handling and storage, damage caused by use in waves or shore break or damage caused by anything other than defects in material and workmanship.
6. This product must not be modified and/or fitted with a motor.
7. This product must not be used in excess of the manufactures recommended maximum load capacity.
8. This warranty is void if any unauthorized repair, change or modification has been made to any part of the equipment.
9. This warranty for any repaired or replacement equipment is good from the date of the original purchase only.
10. The original purchase receipt must accompany all warranty claims. The name of the retailer and date of purchase must be clear and legible.
11. There are no warranties that extend beyond the warranty specified here in.
12. Register your boat by sending the warranty card located below to your seller or electronically via our website at www.aquatone.com.

WARRANTY REGISTRATION CARD

Date of Purchase: _____ Model: _____

HIN Number: _____

Dealer/Store Name: _____ Dealer/Store Address: _____

State/Province: _____ Zip/Postal Code: _____ Country: _____

Surname: _____ Name: _____ Mr. ☐ Mrs. ☐ Ms. ☐

Address: _____ State/Province: _____ Zip/Postal Code: _____

Country: _____

Telephone Number: ( )_____ Email: _____

aquatone

PADDLE IN STYLE I WWW.AQUATONE.COM

AZTRON SPORTS (SHANGHAI) CO.,LTD